



Quick Start Guide Model 1230-4

Your new Victor 1230-4 is a very versatile and feature loaded calculator. Complete directions, explanation of key functions and user examples can be found in the enclosed instruction manual. Quick Start will guide you through the important settings prior to operation.

Before using the printer for the first time, remove the tape holding the twin spool ribbon in place. See figure 1 and 2.



Fig. 1



Fig. 2

Loading the Paper

Set the slide switch NP/P/IP switch to NP position

Place paper holder into position (fig 3)

Install the paper roll on the holder (fig 3)

Insert the paper into the printer slot (fig 4)


Press [] key to feed paper to desired length



Fig. 3



Fig. 4

Setting the Time/Date

1) Press TIME and then press and hold SET key until the first digit of the month flashes

2) Enter the month MM using the number keys (the first digit of the month will flash)

3) Enter the date DD using the number keys (the first digit of the date will flash)

4) Enter the year YYYY using the number keys (the first digit of the year will flash)

5) Press SET to confirm the date

6) Press C/CE, TIME, TIME and then press and hold SET until 1st digit flashes.

Enter the time using the number keys.

7) Press AM/PM to toggle morning or afternoon and press SET to confirm the time.

8) Press 12/24 to switch between 12-hour or 24-hour clock.

The following parts and accessories are available for your Victor 1230-4 and may be purchased from your local supply dealer or from www.victortech.com

Victor 7010 Twin spool Ribbon



Victor 7050 Paper Rolls



Victor LS-125 Calculator Stand



If you have any questions regarding the operation of your Victor model 1230-4, please feel free to contact our Customer Care Center at (800) 628-2420 or E-mail sales@victortech.com

Victor Technology
780 W Belden Ave. Addison, IL 60101 USA

Tel: (630) 268-8400

Fax: (630) 268-8450

Toll Free: (800) 628-2420

www.victortech.com